



Mag Meter Setup Guide



Navigation keys




Enter to settings menu and back key



Changing Units


- Press the ► key to select the units.
- Once highlighted press the ▼ to scroll through the options to configure your units.

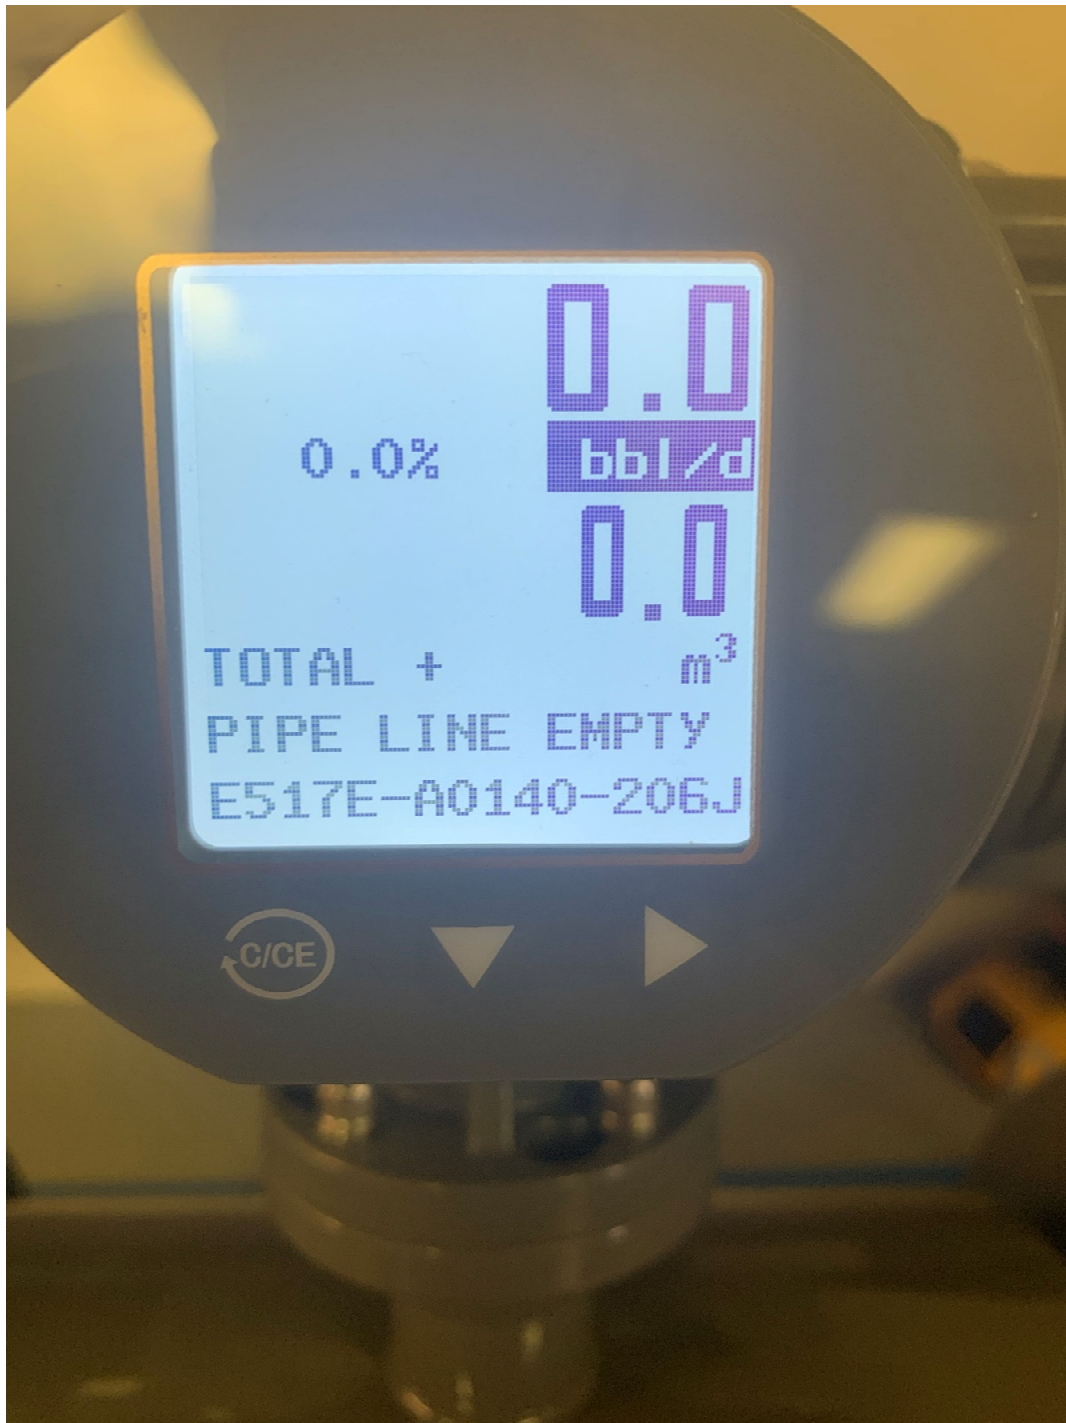




Changing Totaliser

- After selecting your units use the ► to select your units for totaliser.
- Then use the ▼ key to configure your units for the totaliser.

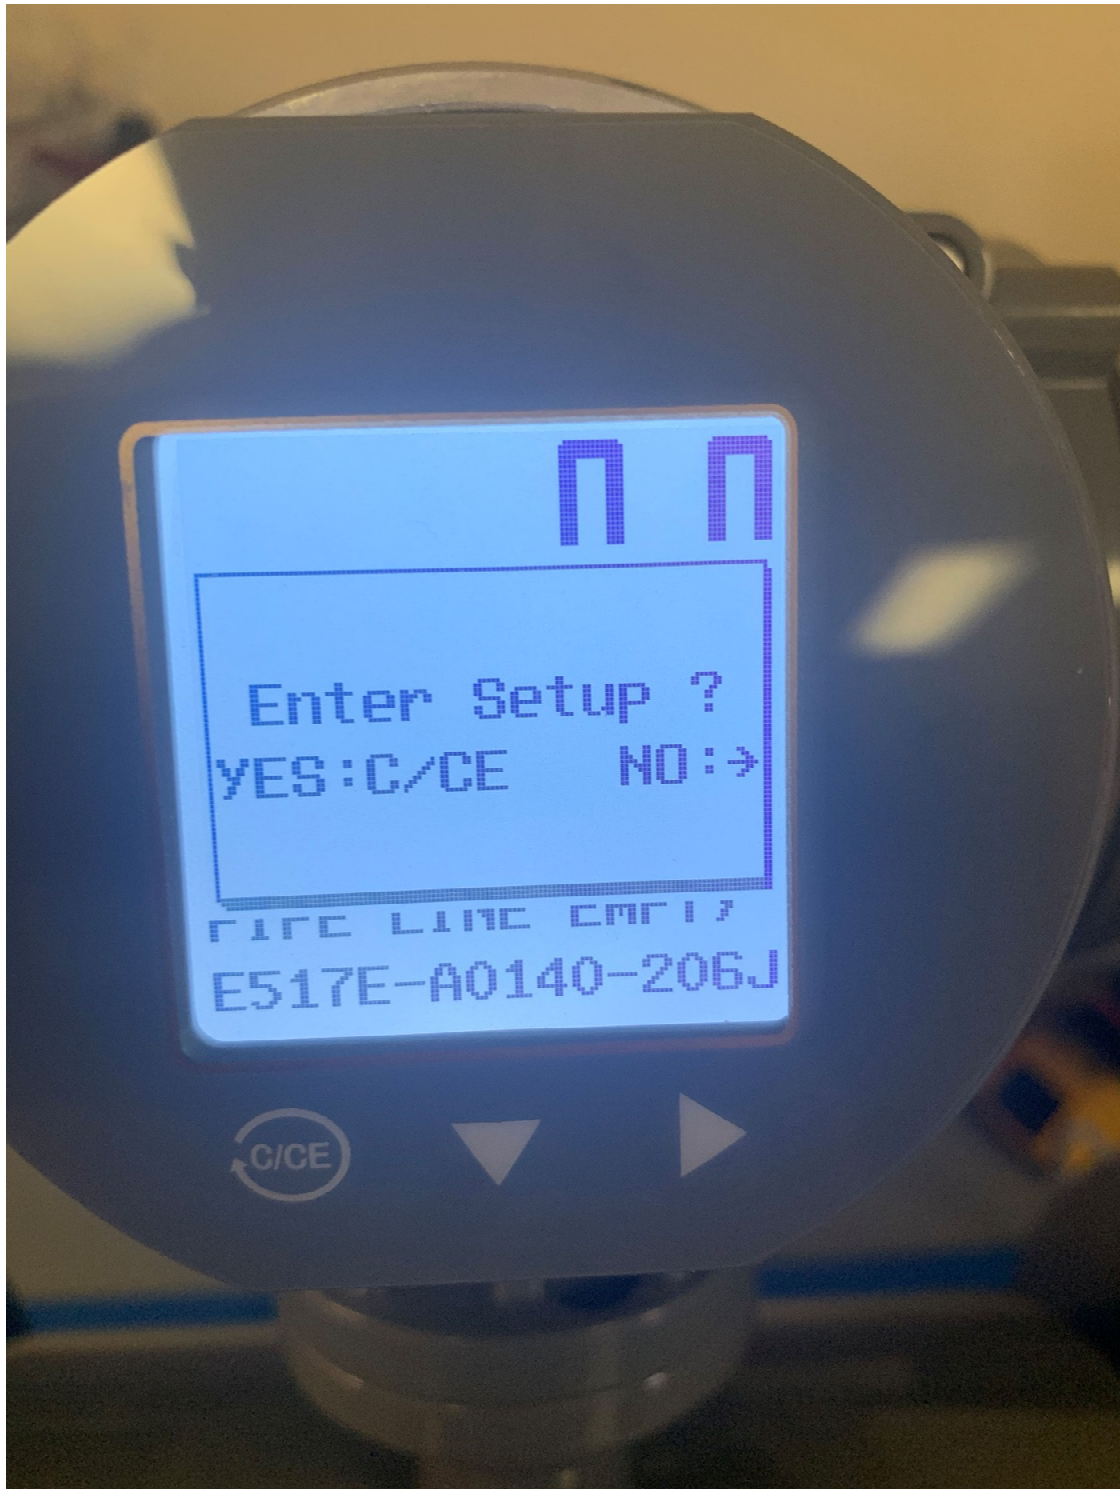

Double press on C/CE to navigate to the settings menu

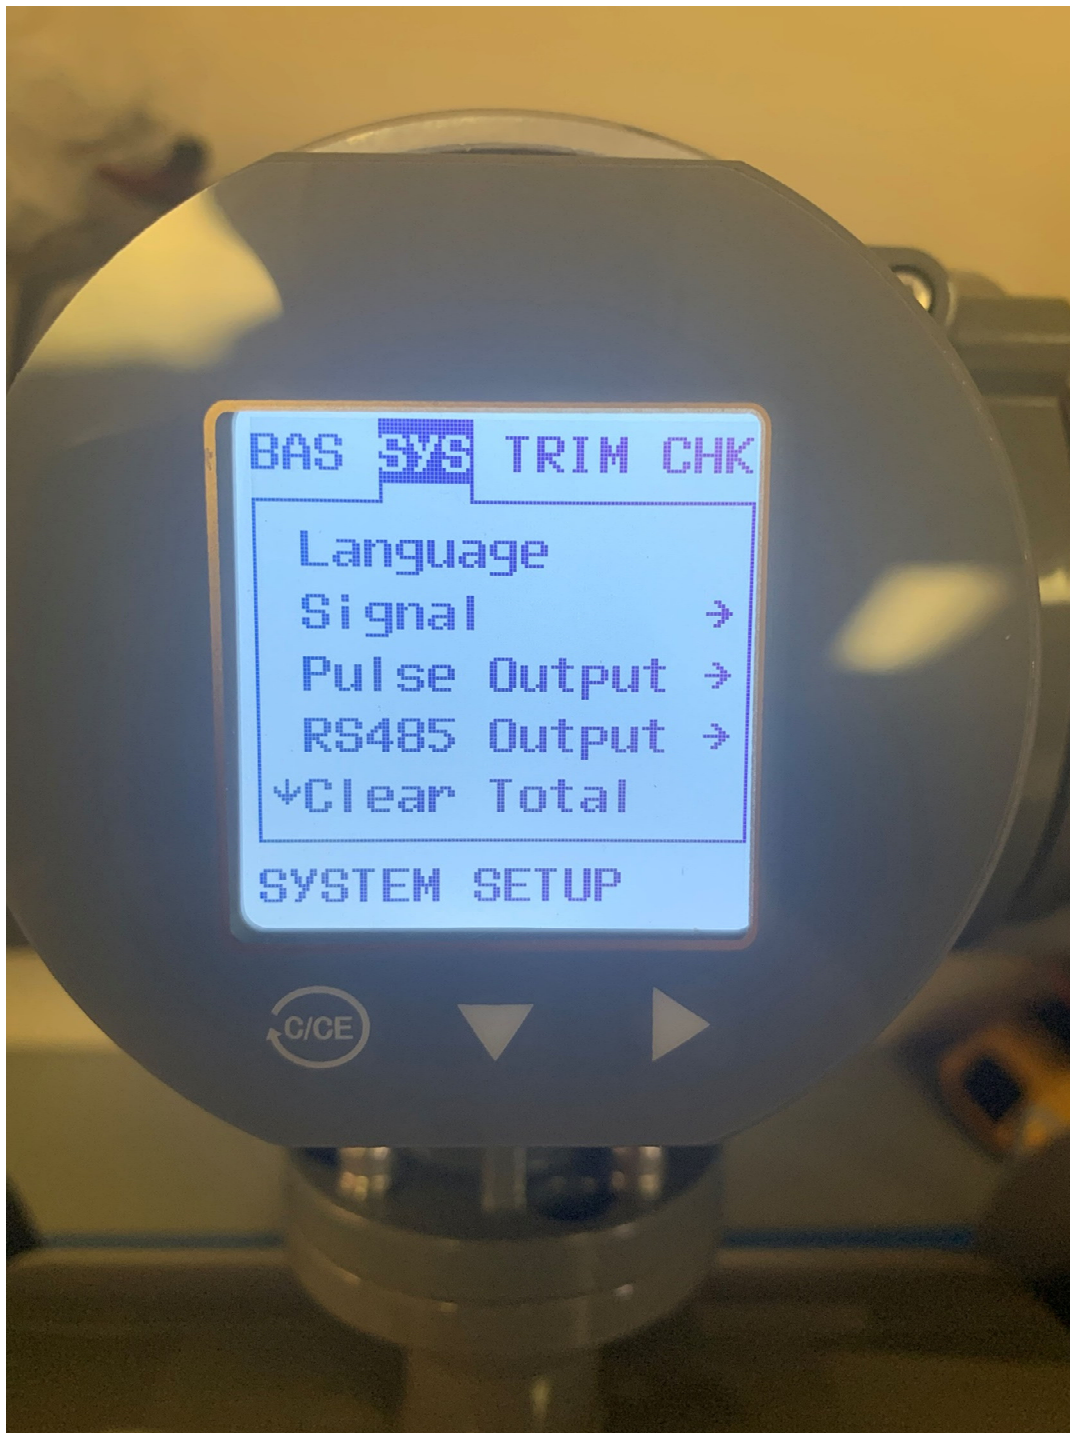


Navigate to system and press the ▼ key to enter the menu options. Select RS484 output ►




Here you will be able to make changes to your Baudrate, Parity, Stop bits, and Address.


Once you have configured your communications press C/CE to go back to your menu options.

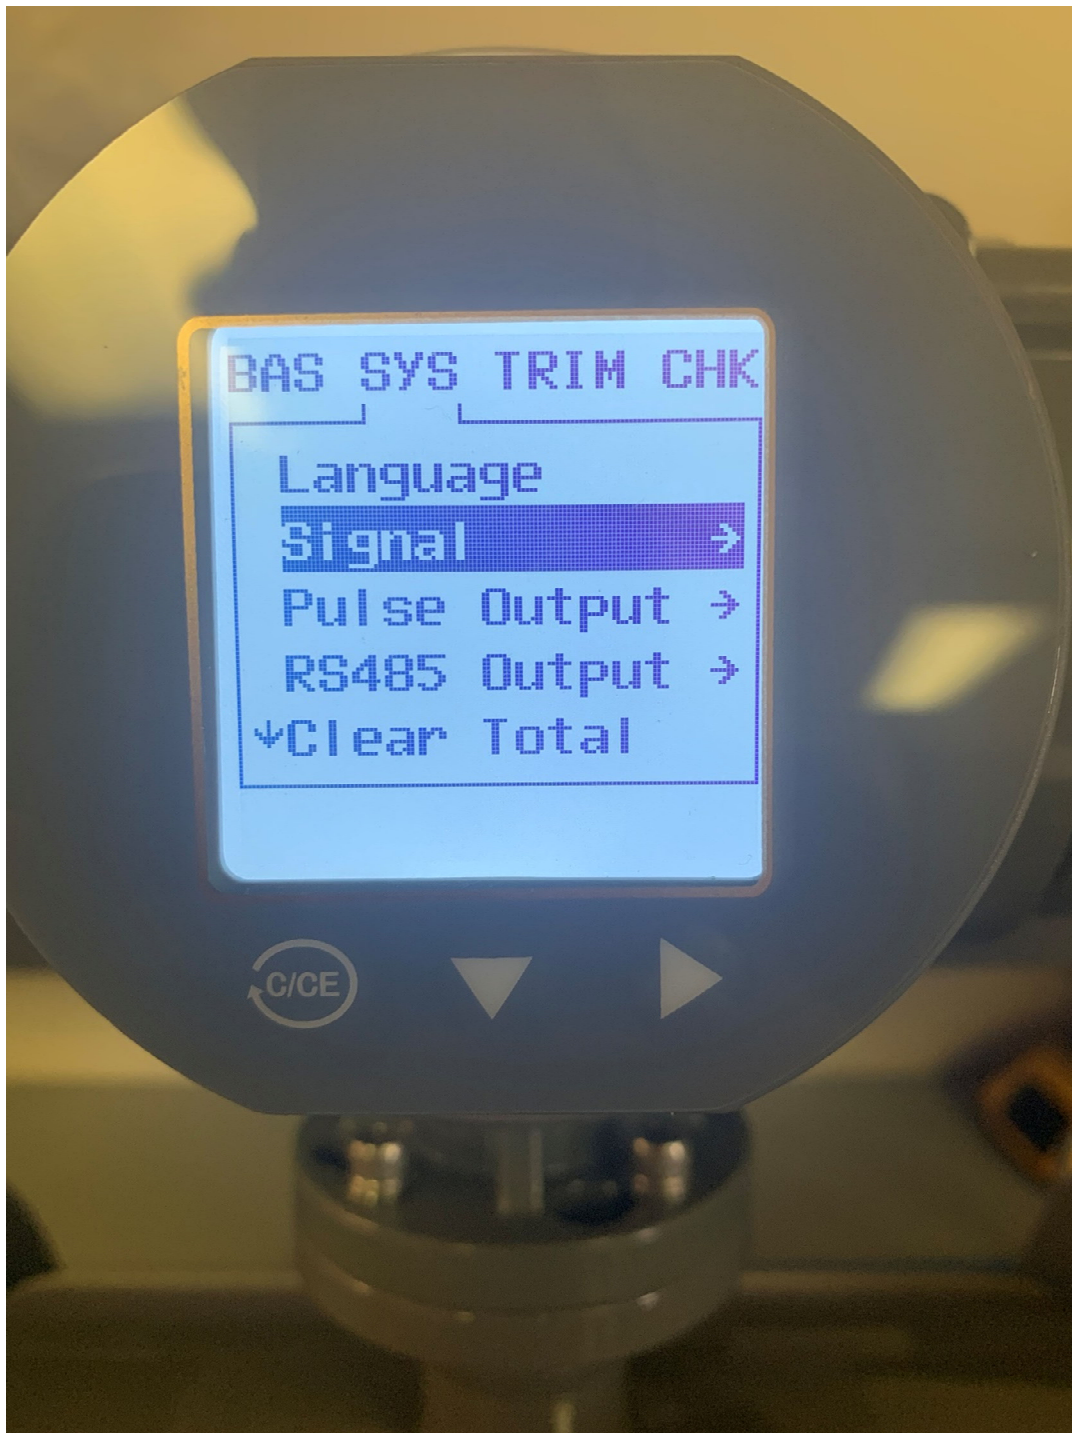

Select Signal

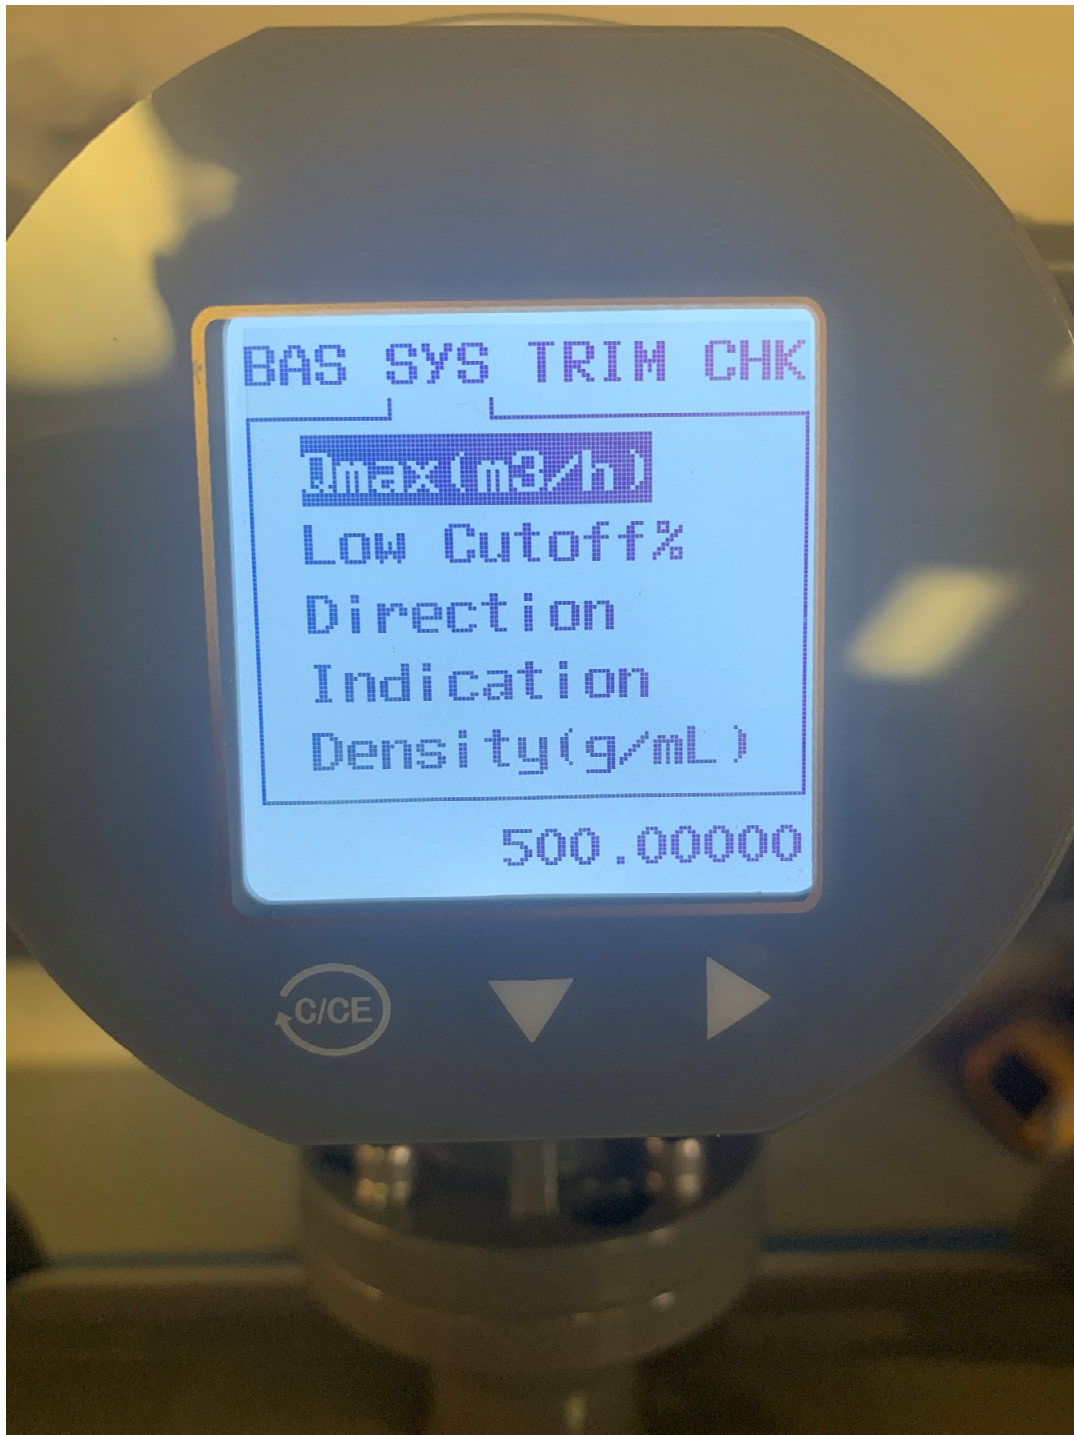

Here you can change your low flow cutoff

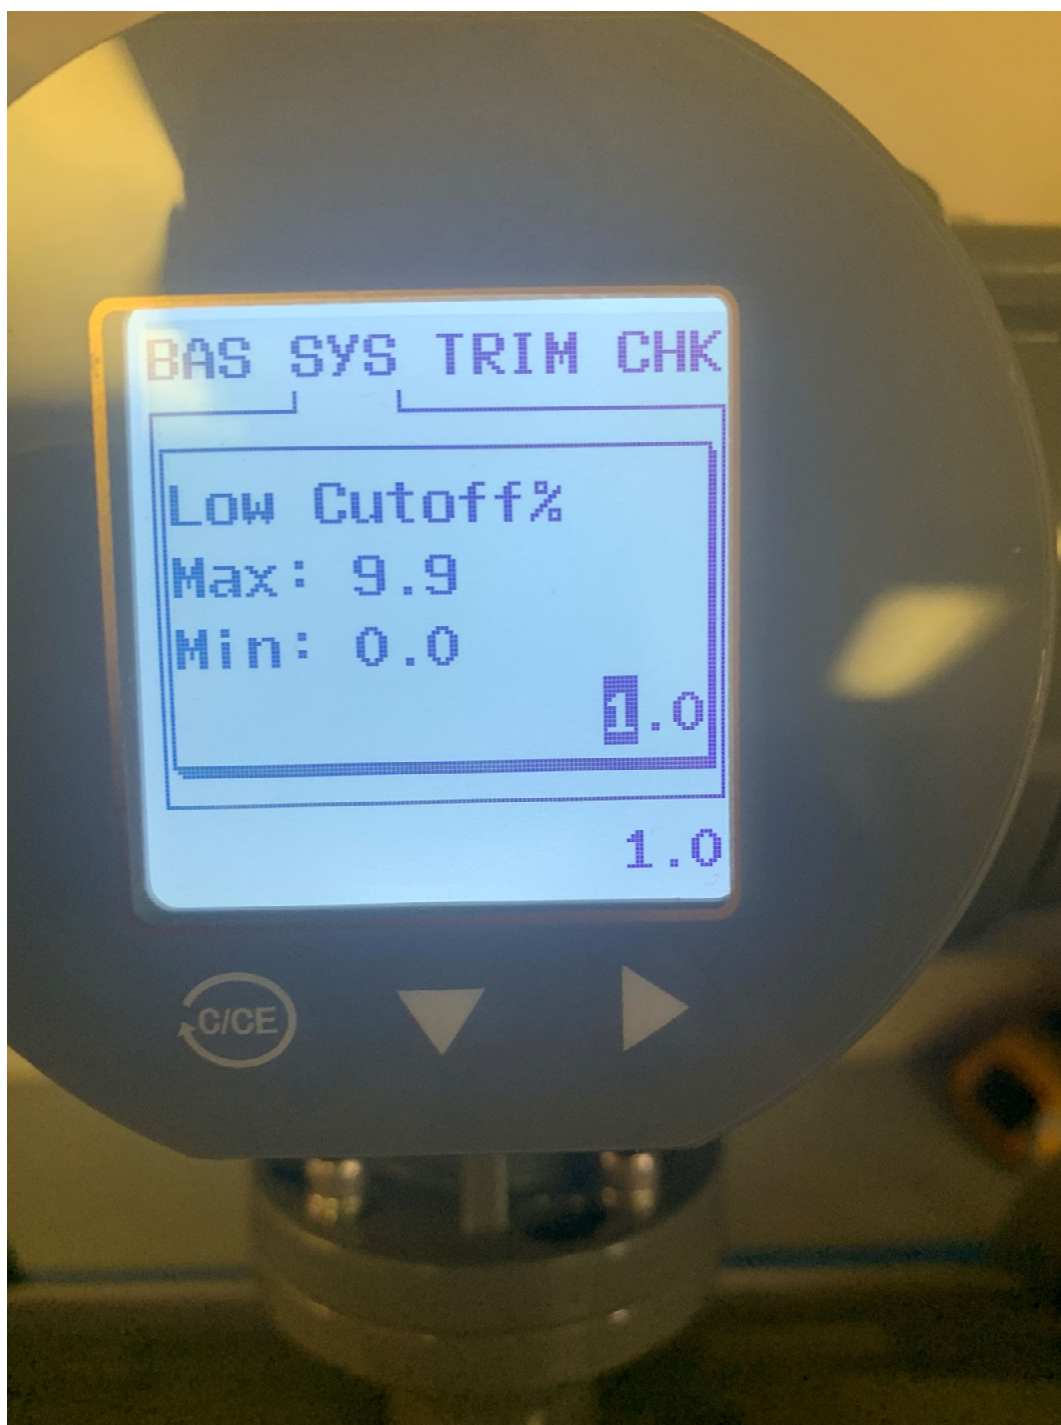

If needed, put a low flow cutoff percentage into your meter. Start off with a small number and if you need to increase it do so in small increments.